



DIGITAL TV

configuring the remote

TV Mode

Press TV, then MENU to control the television.

STB Mode

Press STB, then MENU to display the Electronic Program Guide (EPG).

Programming the remote to control the TV

Simultaneously press and hold the TV and OK buttons on the remote. After approximately 2 seconds, the TV button will light. Release the TV and OK buttons—the TV button remains illuminated. Enter the 3-digit brand code.

The TV button will flash off and on again when each digit is entered. When the third digit has been entered, the TV button will go out. Verify that the remote control works with the TV.

If the brand code entered is incomplete, after several seconds, the remote will exit the TV brand code entry mode and the TV brand code will be unchanged. If the remote does not recognize a TV code, the TV button will flash rapidly for a second and remain illuminated. If this happens, re-enter the correct TV brand code.

Most TV makes have more than one brand code listed in the brand code table—try all brand codes that are listed for that make until a match is found.

TV Codes

Admiral, Aiko, Aiwa, Akai, Audiovox, Bell & Howell: 033, 038, 098, 099, 105, 110, 111, 112, 114, 116, 127, 157, 197, 199, 200

Panasonic, Philco, Philips, Pioneer, Pulsar: 010, 010, 025, 036, 040, 041, 051, 055, 058, 059, 060, 061, 062, 063, 069, 075, 079, 083, 087, 089, 096, 100, 103, 104, 109, 111, 131, 137, 143, 149, 157, 163, 196, 200, 212, 213, 214, 223

Citizen, Craig, Curtis Mathes, Daewoo, Emerson: 000, 002, 003, 007, 008, 009, 011, 016, 025, 029, 030, 033, 035, 036, 038, 041, 055, 069, 072, 075, 081, 082, 083, 084, 085, 096, 087, 090, 092, 093, 094, 096, 097, 098, 100, 101, 103, 105, 108, 109, 111, 112, 113, 114, 119, 127, 149, 153, 157, 158, 159, 160, 163, 196, 197, 198, 199, 200, 212, 213, 215, 217, 219, 228, 229, 231, 233

Quasar: 025, 075, 089, 104, 157, 212, 214

Fisher, Fujitsu, Funai, GE: 013, 016, 017, 020, 036, 038, 041, 075, 079, 080, 081, 086, 098, 104, 105, 109, 114, 127, 141, 150, 152, 196, 199, 212, 214, 217, 224, 228, 229, 231, 231

Radio Shack, RCA, Realistic: 005, 014, 015, 018, 019, 036, 038, 041, 049, 053, 054, 075, 076, 077, 086, 087, 094, 097, 098, 103, 105, 111, 112, 114, 115, 127, 157, 196, 212, 215, 216, 223, 228, 229, 231, 233, 235, 236, 237

Hitachi: 018, 035, 067, 068, 069, 070, 071, 087, 094, 097, 135, 215

Samsung, Sansui, Sanyo, Scott, Sears, Sharp, Sony, Sylvania: 010, 016, 017, 023, 027, 033, 034, 035, 036, 037, 038, 041, 044, 045, 046, 047, 048, 052, 054, 058, 059, 060, 061, 062, 063, 066, 076, 080, 084, 086, 091, 093, 094, 095, 096, 097, 098, 100, 103, 105, 109, 111, 114, 115, 123, 125, 126, 127, 128, 141, 144, 149, 157, 163, 195, 196, 200, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 213, 215, 217, 228, 232, 233

JVC, Jensen: 026, 028, 031, 064, 065, 066, 084

Tandy, Technics, TMK, Teknika, Toshiba, Totevision: 010, 019, 022, 027, 035, 036, 038, 041, 043, 052, 057, 062, 066, 075, 086, 093, 094, 096, 097, 098, 099, 103, 105, 108, 109, 112, 113, 114, 127, 130, 149, 157, 163, 177, 197, 212, 213, 215, 217

Kenwood, KEC: 036, 041, 103, 111, 105

Universal: 078, 079

LG (Goldstar), LXI, Logik: 003, 010, 012, 035, 036, 038, 041, 062, 073, 074, 076, 086, 094, 097, 098, 099, 100, 103, 111, 115, 163, 177, 196, 213, 215, 228, 233

Vector Research, Victor: 028, 036, 041, 065, 111

Magnavox, Marantz, Memorex, MGA, Mitsubishi/Multitech: 022, 032, 033, 034, 036, 038, 039, 040, 041, 042, 056, 057, 058, 059, 060, 061, 063, 066, 079, 086, 088, 096, 097, 098, 099, 101, 103, 105, 110, 111, 114, 127, 138, 163, 177, 213, 215, 217, 218, 230

Wards, White Westinghouse: 010, 036, 041, 045, 054, 058, 059, 060, 061, 077, 078, 079, 086, 097, 099, 103, 109, 111, 177, 200, 213, 215, 217

NEC: 024, 035, 036, 041, 066, 097, 103, 105, 111, 132, 171, 215

Yamaha: 036, 041, 103, 111

Optimus, Optonica, Orion: 038, 055, 105, 019, 054, 098, 114, 198, 083, 100, 127, 217

Zenith: 001, 004, 089, 099, 105, 177, 197, 200

www.silverstar.com

Afton	Alpine	Jackson	Thayne	Driggs	Victor
570 S. Washington	Alpine Market	Smith's Plaza	180 N. Main	170 N. Hwy. 33	176 N. Main
307.885.2411	307.654.2411	307.774.7000	307.883.2411	208.354.3300	208.787.3300

SILVER STAR
COMMUNICATIONS